

OcuPi



Quick Installation Guide



Step 1 - Using a suitable screwdriver, push down and turn the 4 screws on the lid of the OcuPi anti-clockwise approx. 90 degrees until they pop up and release.


Step 2 - Remove the lid of the OcuPi.

Step 3 - Undo the large left hand nut anti-clockwise until it is fully removed.

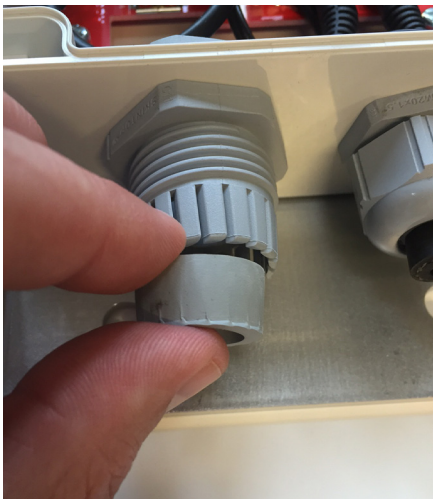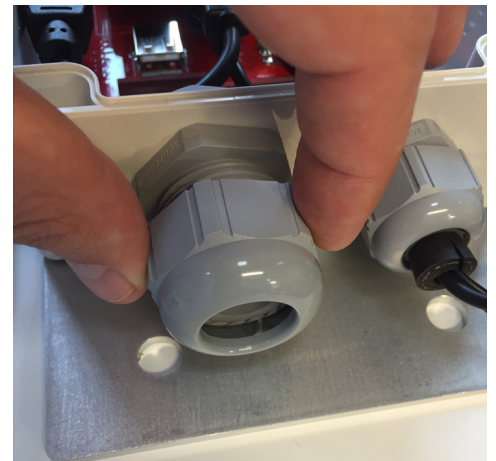

Step 4 - Remove the rubber insert from the left hand plug.

Step 5 - Insert the USB cable of your Oculus through the large nut.

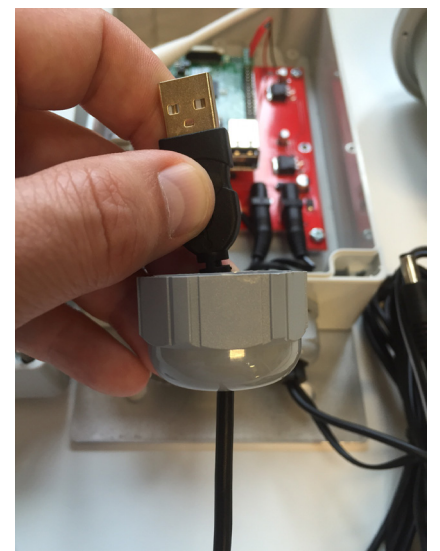



Step 6 - Insert the USB cable of your Oculus through the grey rubber insert from the large plug.

Step 7 - Place the 'split' black rubber hose around the Oculus USB cable, ensuring that it is fully wrapped around the USB cable.



Step 8 - Thread the USB through the large plug and insert it into the USB socket on the red PCB. (Note: Do not insert the USB cable into one of the USB sockets on the Raspberry Pi)

Step 9 - Insert the grey rubber bung into the large plug.

Step 10 - Move the black 'split hose' half-way into the grey rubber bung.



Step 11 - Firmly screw the large nut back on to the plug. Ensure that you do not over tighten this to the point of causing damage to the plug or nut.

Step 12 - Refit the lid of the Ocupi to the box and using a screwdriver, push down on the sprung-loaded screws and turn them approximately 90 degrees clockwise. You should feel them lock into place.

Step 13 - You are now ready to mount your Ocupi using the rear plate.

Ensure you mount the Ocupi with the connector facing downwards.

Step 14 - Once you have mounted everything in place, you are now ready to connect up the Oculus power cable to your Ocupi.

Step 15 - Once the Oculus is fully connected, plug in the power to the Ocupi using the power supply from your Oculus. **(Ensure you do Steps 14 & 15 in the correct order)**

The installation is now complete. Your Ocupi will now automatically set up a wifi connection called 'Starlight Xpress Oculus' (*this may take a few minutes on the first start up*).

Select this connection from your wifi options on your computer or tablet device.

Using your web browser use either of the two options:

Under Windows operating system type:

Http://oculus

Under Mac OSX/iOS/Android/Linux type:

Http://oculus.local

Your web browser will now display the image from the Oculus.

For further information, please read the Ocupi Manual on the CD-ROM

